


PUSH BUTTONS



The PUSH BUTTONS menu let you select an action to be executed when a button is pressed. There are two press events: short push (first line) and long push (second line), except for LINE 5/6 knobs, where the events are button push in and release.






AVAILABLE ACTIONS

NONE	NO ACTION, EVENT IGNORED
XLR1 SOLO	ENTER INPUT MENU, SOLO ON THAT INPUT
XLR2 SOLO	
XLR3 SOLO	
XLR4 SOLO	
AES1 SOLO	
AES2 SOLO	
..	
AUX AES2 SOLO	
XLR1 PHASE	TOGGLE INPUT PHASE
..	
XLR4 PHASE	
AES1 PHASE	
...	
AUX AES 2 PHASE	
XLR1 ARM	TOGGLE INPUT TRACK ARMING STATUS
XLR2 ARM	
XLR3 ARM	
XLR4 ARM	
AES1 ARM	
...	
AES8 ARM	
LINE5 ARM	
LINE6 ARM	
AUX AES ARM	
USER SETTING 1	RECALL USER SETTING 1
USER SETTING 2	RECALL USER SETTING 2
...	...
USER SETTING 8	RECALL USER SETTING 8
METADATA	METADATA MENU
QUICK METADATA	METADATA EDIT IN MAIN MENU
HEADPHONES	HEADPHONES MENU
TOOLS MENU	TOOLS MENU
TIMECODE	TIMECODE MENU
POWER MENU	POWER MENU
TAG LAST TAKE	TAG LAST TAKE
TRACK ARMING	REC TRACKS MENU (ARMING)
TRACK SOURCE	REC TRACKS MENU (SOURCE)
TRACK NAME	REC TRACKS MENU (NAME)
TRACK COLOR	REC TRACKS MENU (COLOR)
MIX SETUP	MIX SETUP MENU
DAY / NIGHT	TOGGLE MAIN SCREEN DAY / NIGHT
MAIN MENU	MAIN MENU
SX-RC8+ MIC	SX-RC8+ MICROPHONE ENABLE
METERS NEXT PAGE	DISPLAY NEXT METER PAGE
METERS PREV PAGE	DISPLAY PREVIOUS METER PAGE

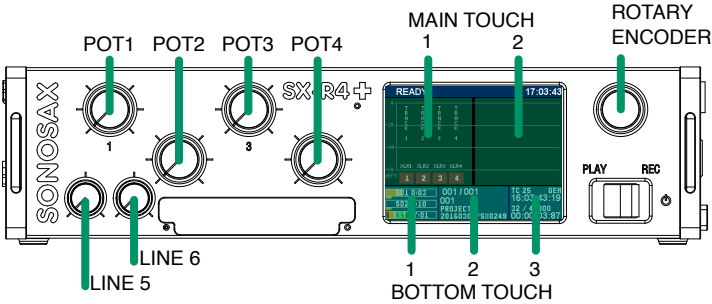

PUSH BUTTON MENU

The menu is split into 8 pages, navigation is done using left/right arrows buttons. Screens below show factory defaults.

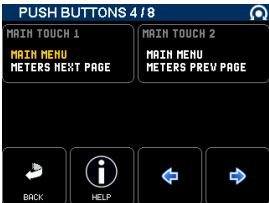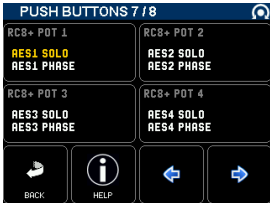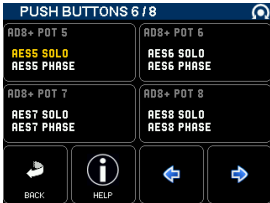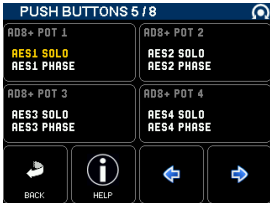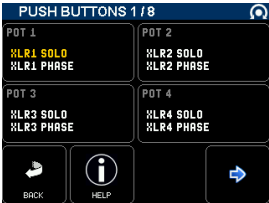

NOTE

The TOOLS menu should not be assigned on a touch button (due to touch lock feature). The MAIN MENU should always be assigned to a button. The MAIN SCREEN upper bar touch area always enter MAIN MENU. TOGGLE PLAY/REC buttons are not customizable.