


TOOLS MENU

THE TOOLS MENU PROVIDES SOME SHORTCUTS TO SOME USEFUL TOOLS & MENUS

WITH DEFAULT PUSH-BUTTON ASSIGNATION, A ROTARY ENCODER LONG PRESS ENTERS THE TOOLS MENU

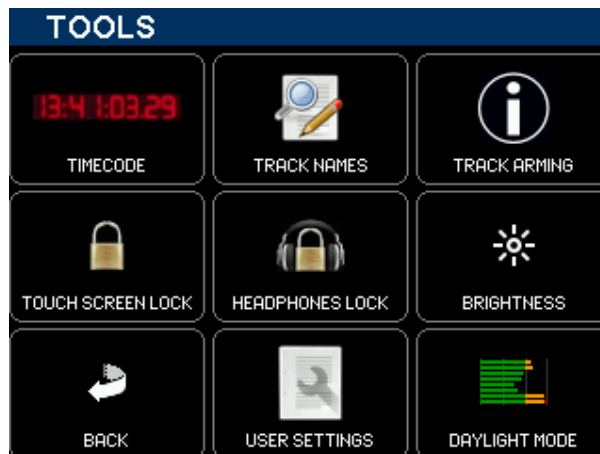

TIMECODE, TRACK NAMES TRACK ARMING, BRIGHTNESS AND USER SETTINGS BUTTONS ARE SHORTCUTS TO DEDICATED MENUS.

TOUCH SCREEN LOCK DISABLES THE TOUCH SCREEN (BUT NOT THE ENCODER OR KNOBS)
HEADPHONES LOCK DISABLES THE PHONES LEVEL ADJUSTEMENT.

DAYLIGHT MODE CHANGES THE MAIN SCREEN COLOR MODE.