 



FIRMWARE UPDATE


1. ENTER BOOTLOADER
KEEP ENCODER PRESSED
WHILE POWERING UP
RECORDER




2. PREPARE UPDATE
- FORMAT A SD CARD
- DOWNLOAD UPDATE FILE
FROM SONOSAX.CH
- COPY FILE INTO SD CARD

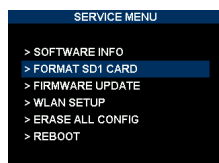


3. FIRMWARE UPDATE
WAIT FOR COMPLETION

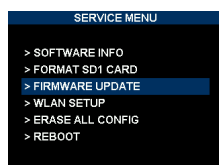

4. FACTORY RESET

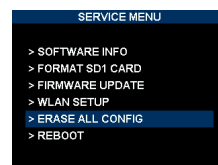


5. REBOOT
DEVICE WILL POWER DOWN

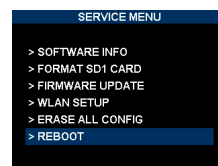

CONFIGURE YOUR RECORDER

SET LOCAL TIME / DATE
SETUP / SYSTEM / TIME
SETUP / SYSTEM / DATE

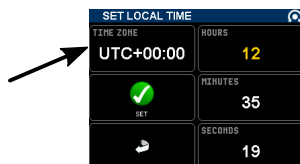

Verify unit time & date and set your
local time zone.

If you don't know your time offset,
visit https://en.wikipedia.org/wiki/List_of_UTC_time_offsets

SELECT INPUT GAINS OR FADERS
SETUP / POT SETUP

INPUT GAINS

Default mode

Pots are XLR 1-4 input gains



FADERS

Two level curves available:


-60..+12 dB

-60..+24 dB

Both level curves mute at
min position (-60 dB)

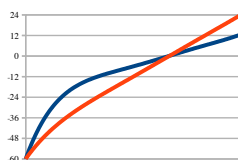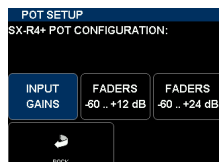

Once fader mode is enabled, enter the MIX menu
(SETUP / MIX) to assign faders to tracks. Use the
assign button for that purpose.

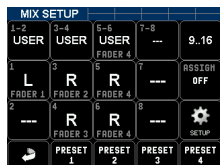

SX-AD8+ or SX-RC8+ can be used to add 8 more faders
to the recorder.

CUSTOMIZE CONFIGURATION

USER SETTINGS

SETUP / USER SETTINGS

A USER SETTINGS STORE THE
RECORDER CONFIGURATION.
THERE ARE 8 AVAILABLE SLOTS,
NAME IS USER EDITABLE.




RECORD SETTINGS

SETUP / RECORD SETTINGS

SD2 CAN RECORD ONLY MIX
TRACKS

32 OR 24 BITS WAV FILE FORMAT

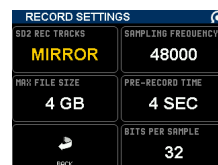

ENHANCE INTERFACE

REC TRACKS

SETUP / METERS SETTINGS

ASSIGN A COLOR TO ANY TRACK
SET METERS ORANGE & RED LEVEL
SET MAIN SCREEN METERS RANGE



PUSH BUTTONS

SETUP / SYSTEM / PUSH BUTTONS

ASSIGN VARIOUS FUNCTION OR
MENUS ON HARDWARE PUSH
BUTTON AND TOUCH AREAS



AND MORE...

- HTML SOUND REPORT GENERATION
- USER EDITABLE SNIPPET LIST FOR TRACK NAMES AND NOTES
- 4 CHANNELS OUTPUT OPTION BOARD SUPPORT

...